


Sunstrip Operation Guide

Control Panel

The **MODE button** selects either DMX input (indicated with an A) or Program mode (indicated with a P).

The **MENU button** is used to select different parameters available once the MODE has been set.

The **ARROW buttons** change level settings for address, chase number, dimming, speed and intensity.

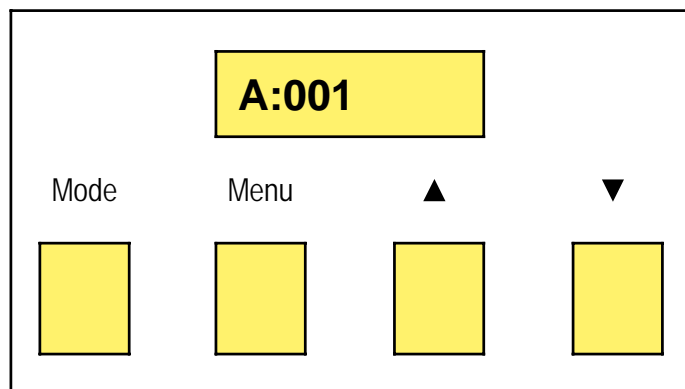

DMX Mode

Check that the display shows an “A”. If it shows “P”, press the Mode button once. An “A” should appear.

Press the Menu button until “CH” appears in the display.

Use the Arrow keys to select the number of channels (01, 02, 05 or 010)

Press the Menu button until an “A” appears. Use the Arrow keys to select the correct start address.

Channels	Lamp Assignments									
1	A	A	A	A	A	A	A	A	A	A
2	A	A	A	A	A	B	B	B	B	B
5	A	A	B	B	C	C	D	D	E	E
10	A	B	C	D	E	F	G	H	I	J

Chase Mode

Check that the display shows a “P”. If it shows “A”, press the Mode button once. An “P” should appear.

Press the Arrow keys to select your desired program. The display will show a “P” followed by 01 - 16, or AUTO or FULL. Only 1 program may be selected.

Press & hold the Menu button until “SP” appears in the display. Use the Arrow keys to select the desired speed.

Press & hold the Menu button until “D” appears in the display. Use the Arrow keys to select the desired intensity.



Gradav Hire & Sales Ltd

Unit C6 Hastingwood Trading Estate
Harbet Road, London N18 3HU

Phone 020 8803 7400 email office@gradav.co.uk
FAX 020 8803 5060 webwww.gradav.co.uk